



👁 **Note!**

Please note that this image is a general representation of the product and may differ slightly from your product.

EDC Cancellation kit, BMW M3 E90/E92

35020-04

Mounting Instructions

⚠ Warning!

It is advisable to have an Öhlins dealer install the cancellation kit.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported.

Front axle:

At the front axle, the factory-installed connectors on the wiring harness must be replaced with the supplied connectors.

⚠ Warning!

Before cutting the wire, disconnect the battery to protect the vehicle's electronics. Please follow the vehicle manufacturer's instructions and guidelines.

1.



Cut the wire 30 mm from the connector and attach the supplied connector set. Pin assignment is not relevant when installing the new connector.

Connector steps:

1. Attach the wire seal.
2. Strip the wire
3. Crimp the pin using an appropriate tool.
4. Insert the pin into the housing.
5. Lock the connector by pressing the front part of the connector inward.

The removed connectors can be kept for future reinstallation.


Scope of delivery

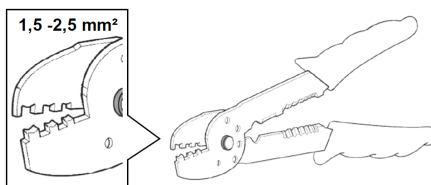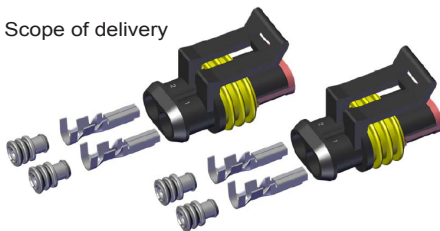

MOUNTING INSTRUCTIONS


Front axle:

Assembly area front axle electronic kit.

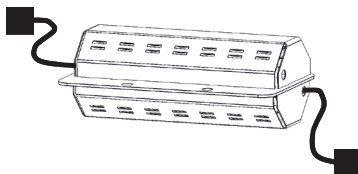


2

Mount the electronic kit with the supplied allen screws and serrated nuts on the bracket.

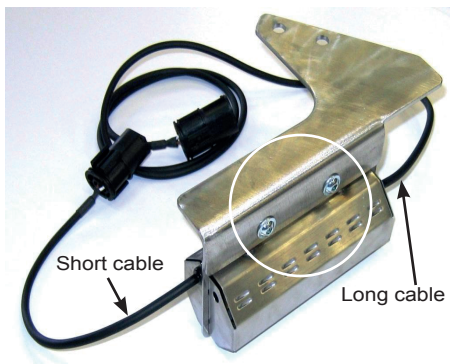

3

Dismantle the original nuts of the dome strut.

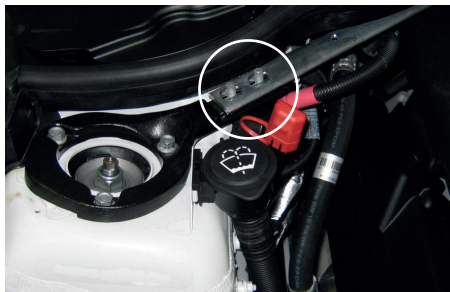

MOUNTING INSTRUCTIONS

4

Fix the complete assembled elektronickit on the dome strut with the original nuts.

Note!

Please refer to the vehicle manufacturer for torque specifications.



5

Connect the elektronickit with the original cable harness and fix the cable with the supplied cable ties on the marked points.



MOUNTING INSTRUCTIONS


Rear axle:

Rear trunk.



Picture BMW M5

Assembly area rear axle electronic kit.

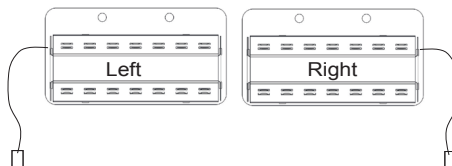

6

Dismantle the rear trunk carpeting.
Fix the rear axle electronic kit with the supplied tape and connect the cable with the original cable harness. For this remove the side cover.


Note!

Surface must be cleaned and degreased.

Left



Right

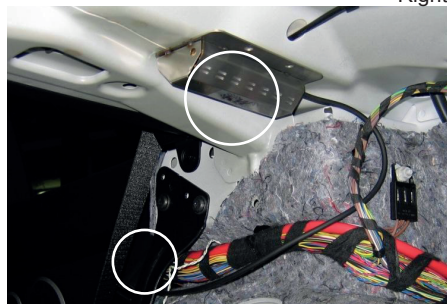


MOUNTING INSTRUCTIONS

7

Lay the cable and fix it with the supplied cable ties on the marked points.

Left

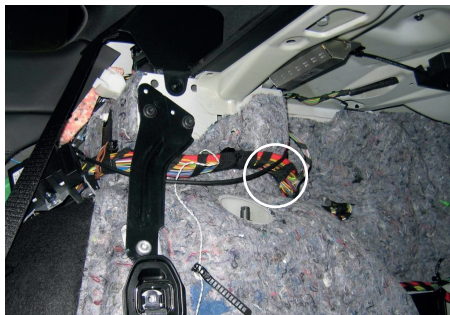

Right



👁️ Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. ML_35020-04_1
Issued 2025-07-01

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com