

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

| Description | Part No | Pcs |
|----------------------------|----------|-----|
| Shock absorber | HO 208 | 2 |
| Tool preload adjuster | 03199-03 | 1 |
| Sticker set "ÖHLINS" | 10207-01 | 1 |
| Owners manual road & track | 07241-02 | 1 |

Alternative spring

| | | |
|------------------|----------|---|
| Spring 46-50/230 | 66396-52 | 2 |
|------------------|----------|---|

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Honda ADV 350-MY2022

HO 208

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

👁 Note!

Before mounting this product clean the vehicle thoroughly.

⚠ Warning!


If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.



1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

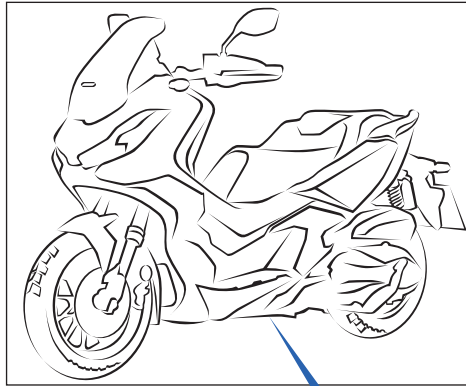

2

Open the seat by using the ignition key.

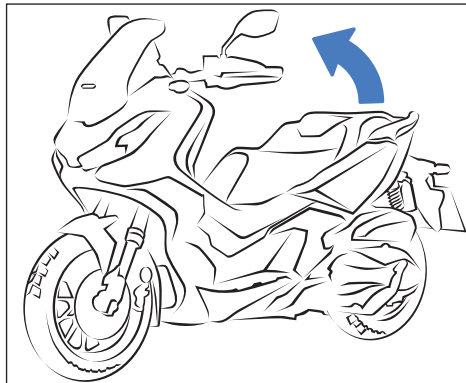


MOUNTING INSTRUCTIONS

3

Remove the grab bars (A) (B) by loosening the screws ①②③④.


Then remove the tail fairing (C) by loosening the screws ⑤⑥.

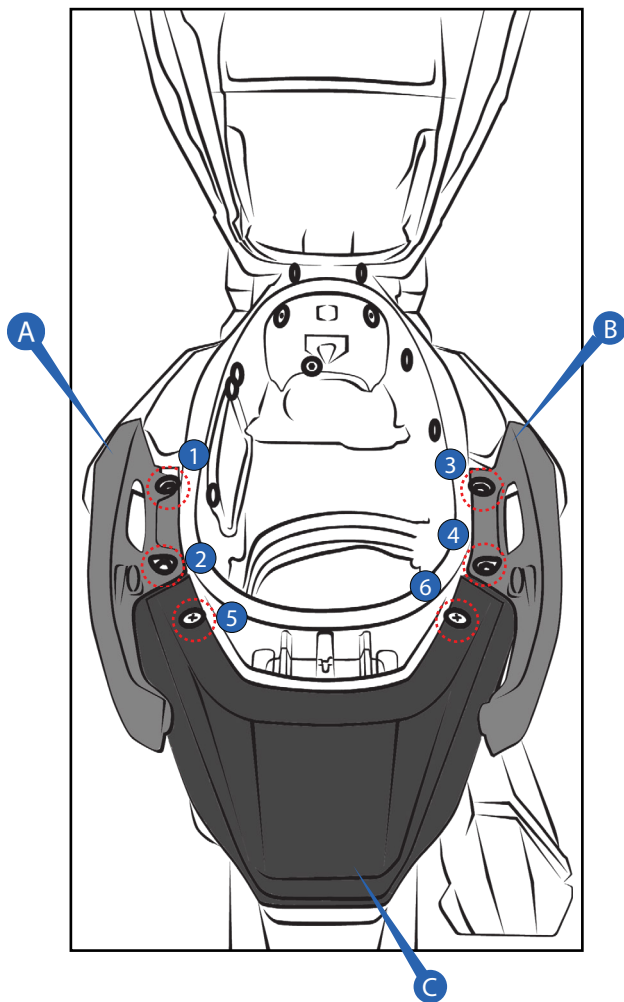

MOUNTING INSTRUCTIONS


4

Remove the battery cover **D** by loosening the screws **1** **2** **3** .

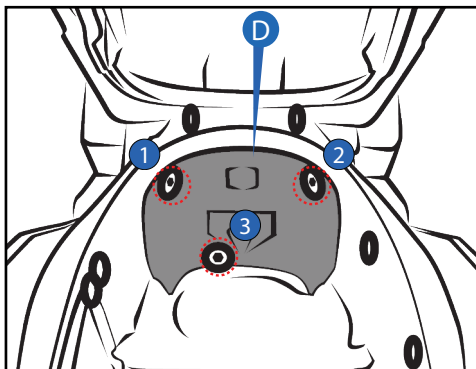

5

Remove the storage box **E** by loosening the screws **4** **5** and unlocking the push clip **6** **7** **8** **9** **10** **11** .



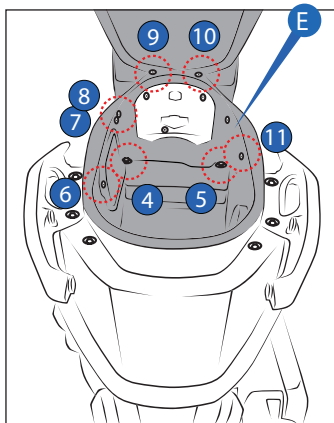


MOUNTING INSTRUCTIONS

7

7.1 Remove plastic cover **F** by loosening the screws **1****2** and loosening **3****4** screws in order to remove side fairing (located underneath the plastic cover)

7.2 Loosen the left fairing **G** by unlocking the clip **5** and do the same for right fairing

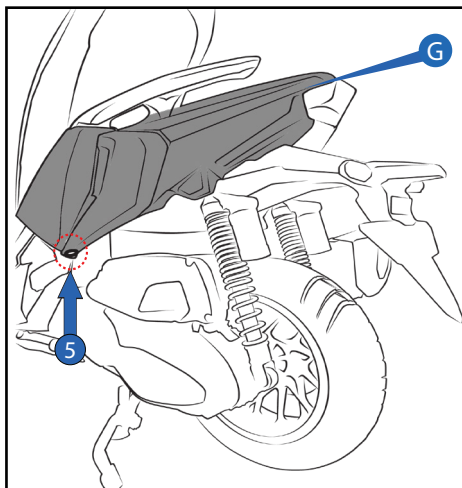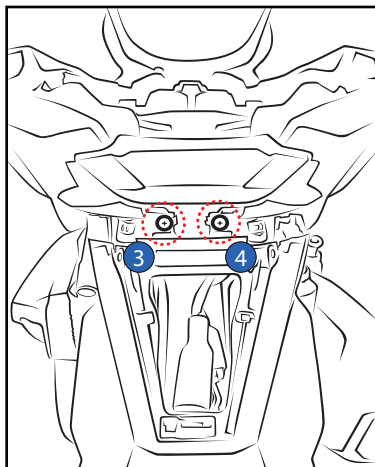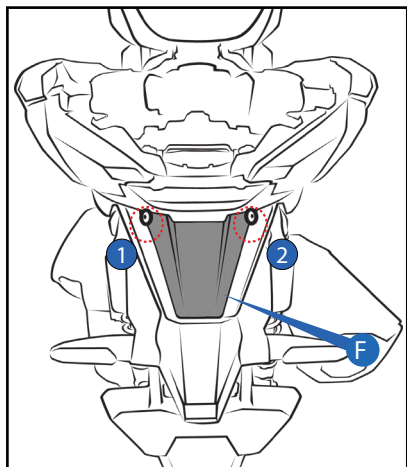


MOUNTING INSTRUCTIONS

7

Remove the standard shock absorber by loosening the upper and lower mounting bolts


①②

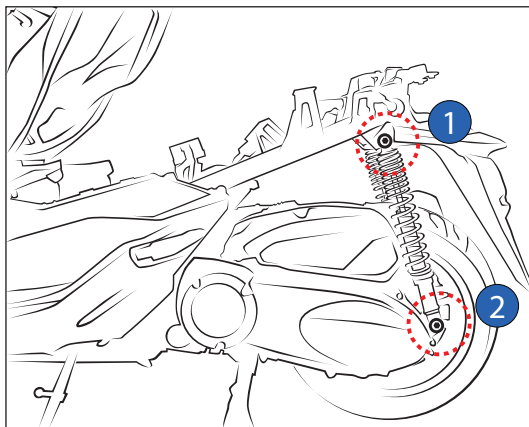

MOUNTING INSTRUCTIONS

8

Install the Öhlins shock absorber by tightening the upper mounting bolt ① at a torque value as specified in the vehicle service manual and the lower mounting bolt ② at torque 20 Nm. Reverse all procedure as necessary.

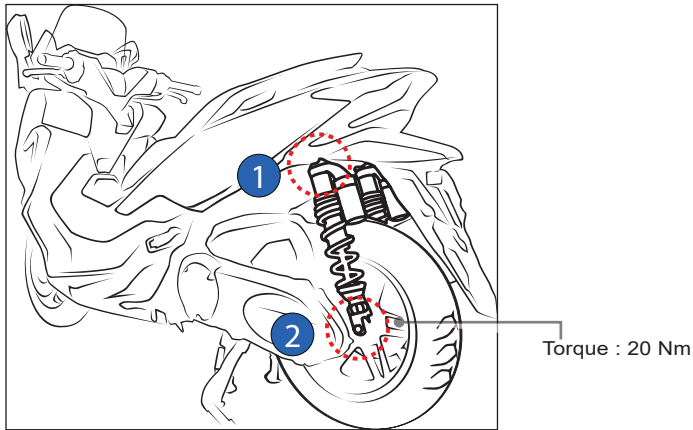

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.


Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

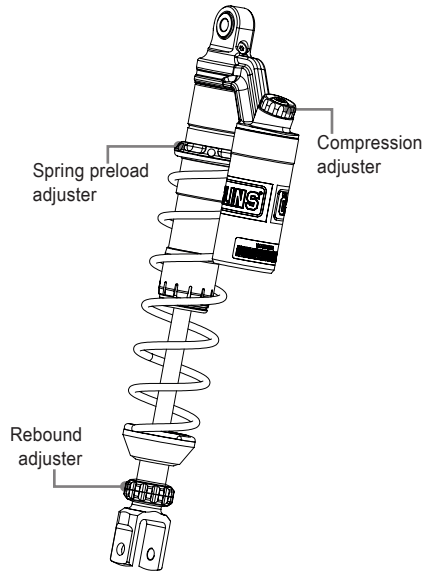

SET-UP DATA

Recommended set-up

| | |
|---------------------------|-----------|
| Spring Preload..... | 3 mm. |
| Compression adjuster..... | 18 Clicks |
| Rebound adjuster | 22 Clicks |

Spring data Installed Spring

| | |
|--------------------|-----------------|
| Part No | 66396-51 |
| Free spring length | 230 mm. |
| Spring rate | Prog. 7-13 N/mm |
| Preload adj.range | [0-22] mm. |
| For rider's weight | Below 80 kg |

Shock absorber data

| | |
|--------------|-----------|
| Length | 446.5 mm. |
| Stroke | 132.5 mm. |

Alternative Spring

| |
|---------------------|
| 66396-52 |
| 230 mm. |
| Prog. 9-15 N/mm |
| [0-22] mm. |
| Above 80 kg+luggage |

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HO 208_EN_0
Issued 2022-08-02

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com