

Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	YA 404	2
Washer 10.5/20/2	60426-01	4
Tool preload adjuster	03199-03	1
Sticker set "ÖHLINS"	10207-01	1
Owners manual road & track	07241-02	1
Alternative spring		
Spring Prog. 21-26 N/mm	60360-06	2

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Yamaha PG-1

YA 404

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

👁 Note!

Before mounting this product clean the vehicle thoroughly.

⚠ Warning!


If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.


1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

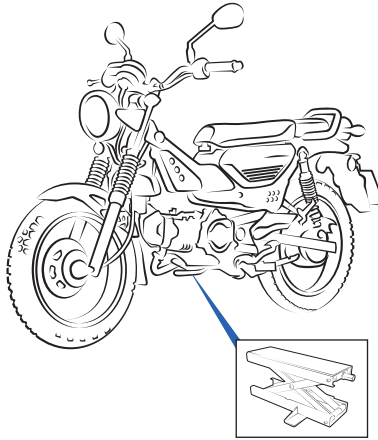

2



Remove the standard shock absorber **A** by loosening the upper and lower mounting bolts **①** **②**. Repeat the operation on the opposite side.

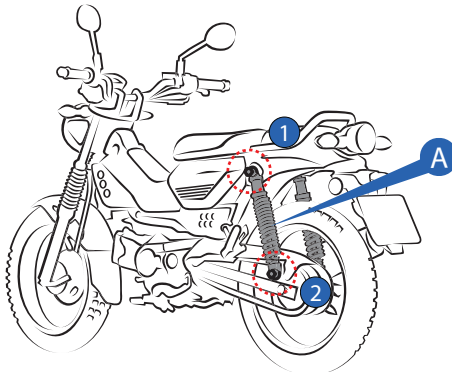

MOUNTING INSTRUCTIONS


3

Install the Öhlins shock absorber by tightening the upper and lower mounting bolts ①② at a torque value as specified in the vehicle service manual. Reverse all the procedures as necessary.

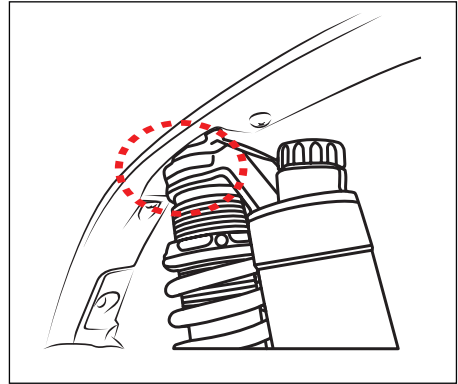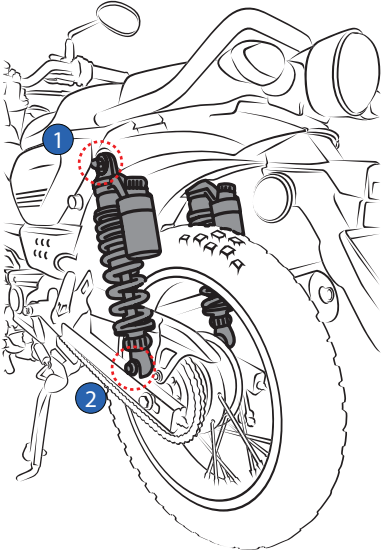

👁 Note!

There's a possibility that the installation of the Öhlins shock absorber may result in a clearance of less than 2 mm at the cylinder head of shock absorber right side due to motorcycle tolerances. Customers may want to consider modifying the fairing to prevent any potential interference.

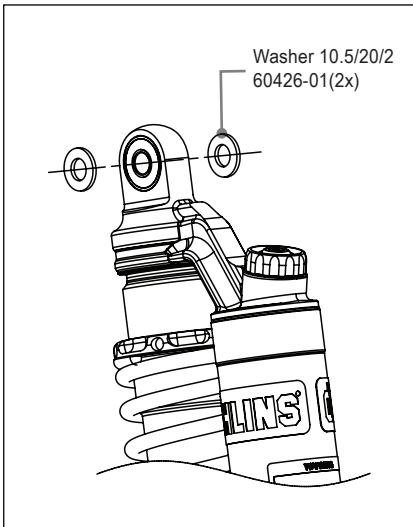

👁 Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.


👋 Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

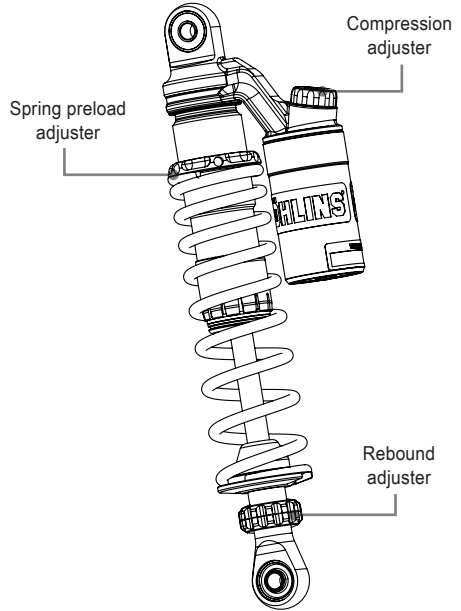

SET-UP DATA

Recommended set-up

Spring Preload 3 mm
Compression adjuster 16 Clicks
Rebound adjuster 18 Clicks

Shock absorber data

Length 350.5 mm
Stroke 96.5 mm

Spring data

Part No 60360-05
Free spring length ... 200 mm
Spring rate Prog. 18-27 N/mm
Preload adj.range ... [0-22] mm
For rider's weight ... Below 80 kg

Installed spring

Alternative spring

60360-06
200 mm
Prog. 21-26 N/mm
[0-22] mm
Above 80 kg

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_YA 404_EN_0
Issued 2024-04-30

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com