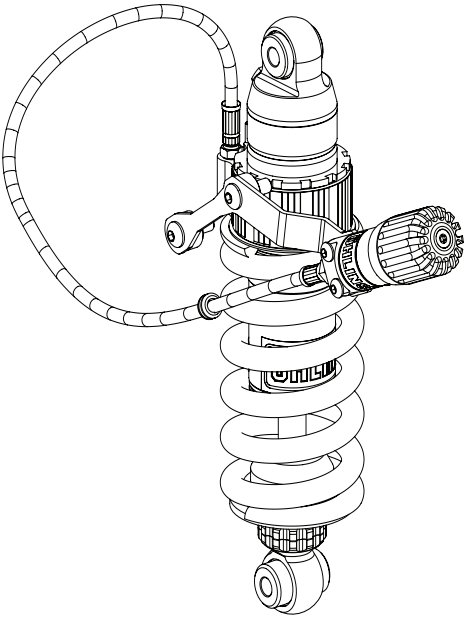


Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	HO 531	1
Bracket	60006-63	1
Washer	63118-17	2
Screw M8x25	05404-14	2
Screw M6x25	05404-06	2
Nut M6	00430-02	2
C-spanner	60710-02	1
Sticker set "ÖHLINS"	10207-01	1
Owners manual road & track	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Honda Forza 750

HO 531

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

Note!


Before mounting this product clean the vehicle thoroughly.

Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

1


Put the motorcycle on a work stand so that the rear wheel barely touches the ground.Make sure the motorcycle is in a stable position.

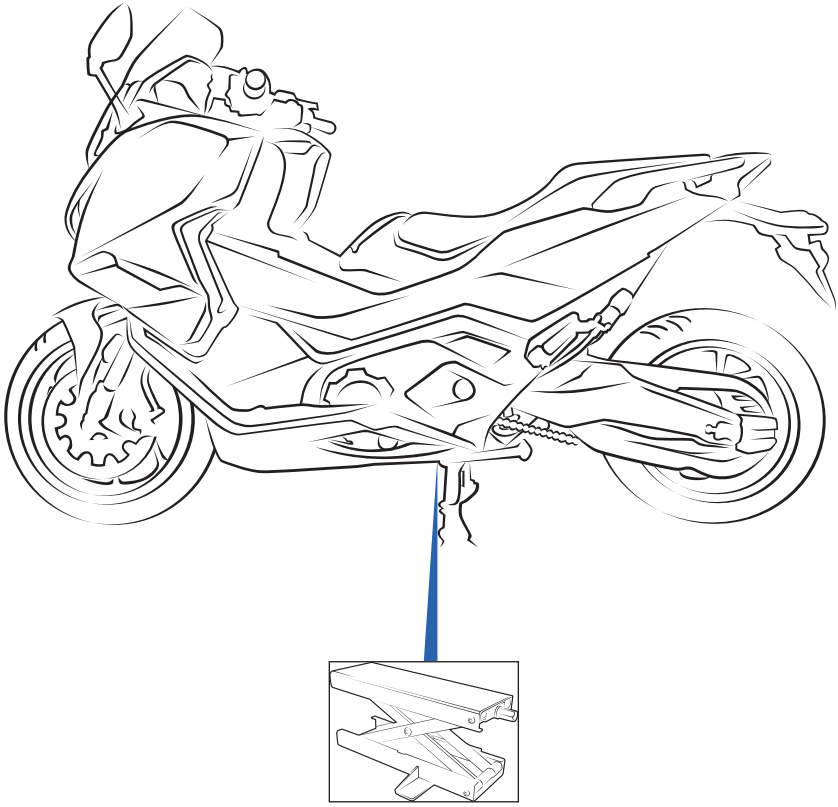

MOUNTING INSTRUCTIONS


2

Remove the plastic side covers A locate on the high ligth area both left and right side of the motorcycle

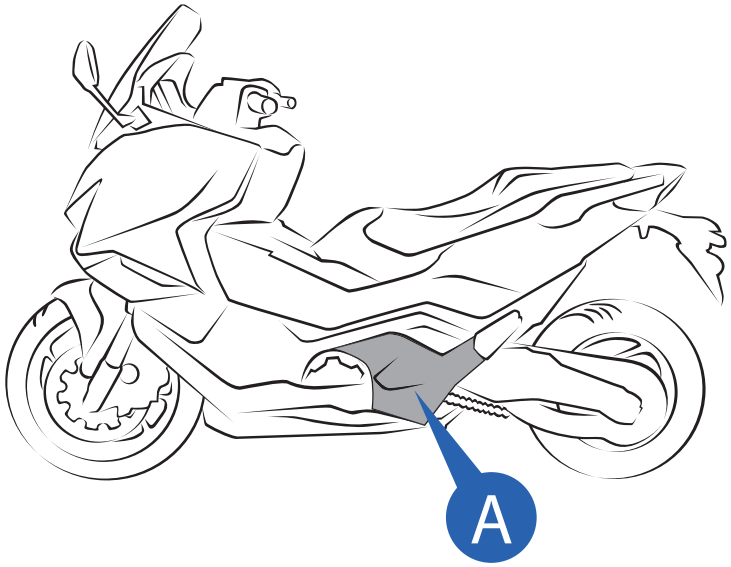


3

Remove the lower mounting bolts ① ②

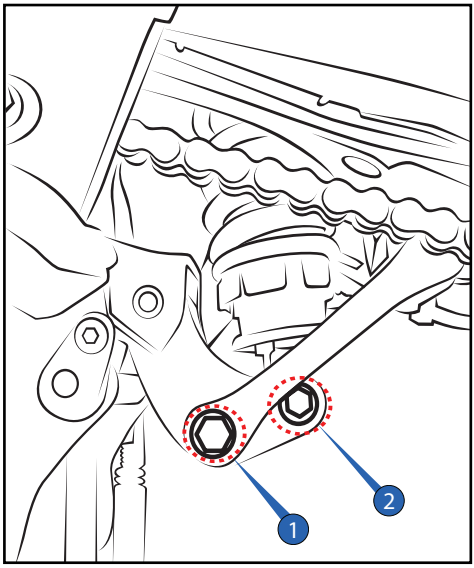


4

Remove the upper mounting bolt ③ accessible from the right side of the motorcycle

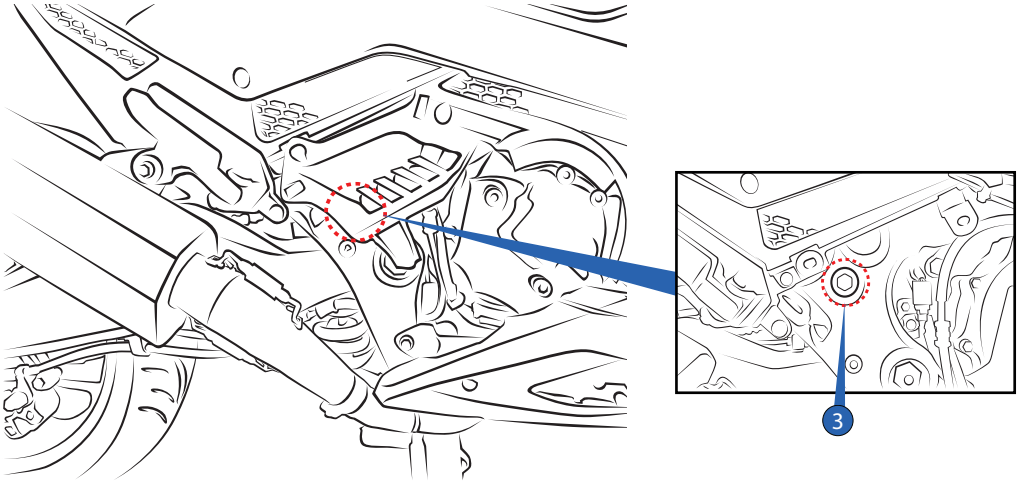

5

Remove the bolts ①② on the left side passenger footpeg.

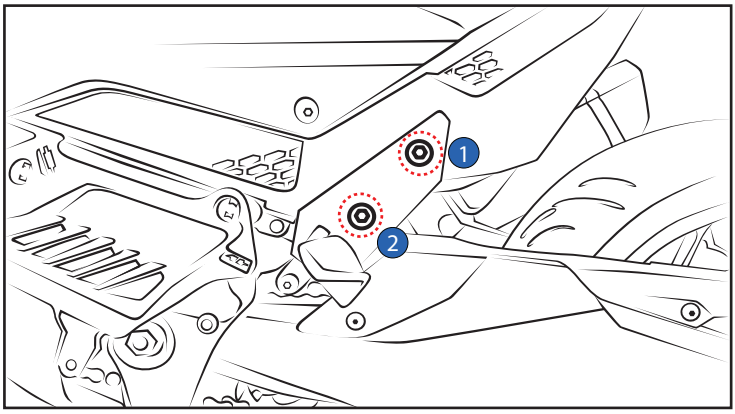


6


6.1 Install the Öhlins shock absorber with the hydraulic preload adjuster pointing towards the front-left side of the motorcycle. Tighten the shock absorber mounting both upper and lower mounting bolts at torque value according to the vehicle service manual.

6.2 Route the hydraulic preload adjuster hose according to pictures 5.1.

6.3 Install the remote hydraulic preload adjuster and bracket with spacer ⑤⑥ to the left side passenger footpeg according to PIC 5.2. Then tighten the screws M6x25 ①② at a torque 7 N•m. Tighten the screws M8x25 ③④ at a torque according to the vehicle service manual.

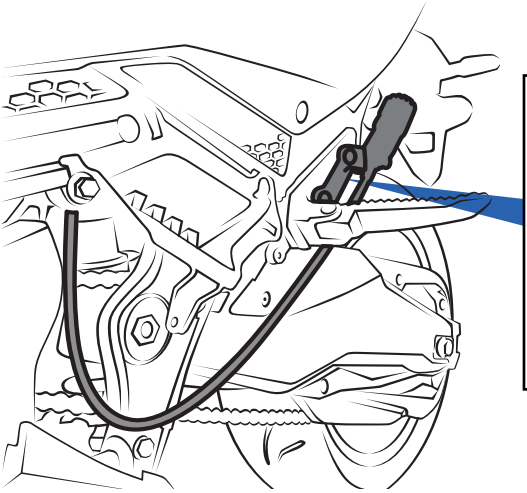


Pic 5.1

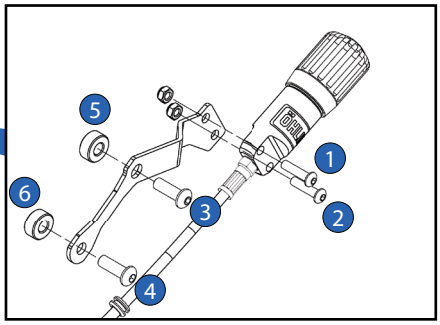

Pic 5.2

6


Drilled a Ø10 mm hole and trim the left side faring according to the picture 6.1 to allow a suitable hose routing

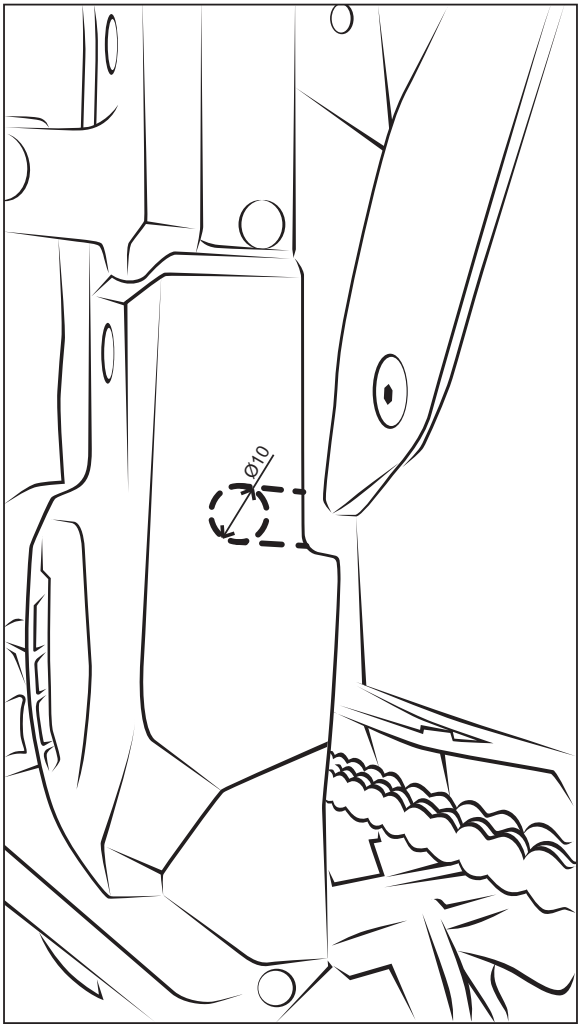


Pic 6.1

7

Assemble the left side plastic fairing (already trimmed) by putting the rubber grommet in the groove according to picture 7.1.

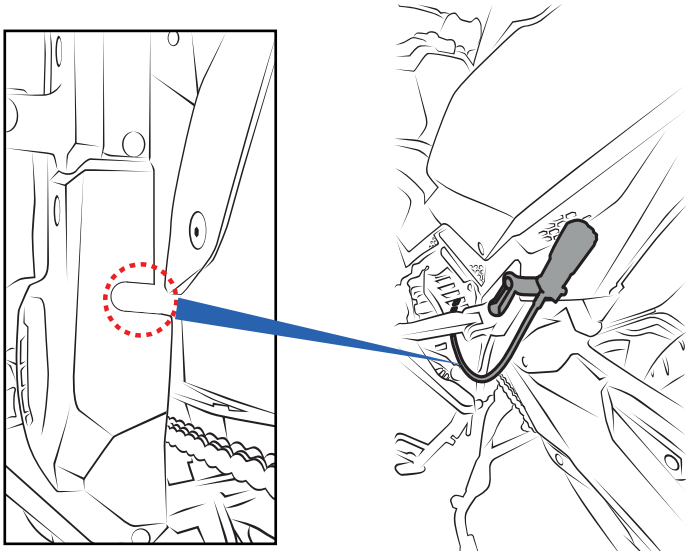

Pic 7.1

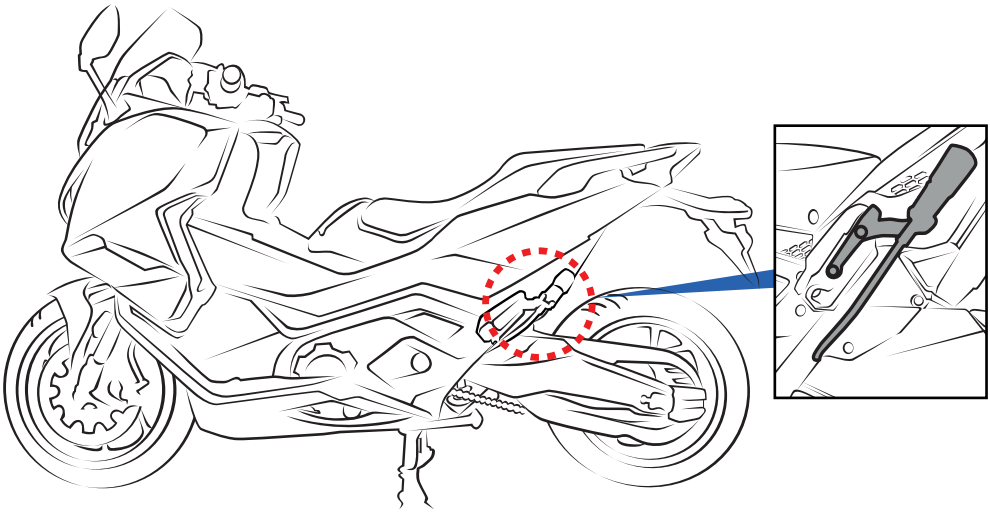


Pic 7.2

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

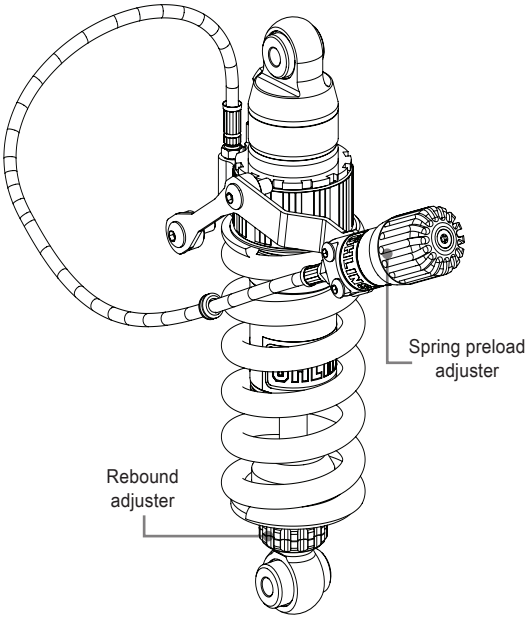

SET-UP DATA

Recommended set-up	
Spring Preload	6 mm
Rebound adjuster	16 Clicks

Shock absorber data	
Length	301 mm
Stroke	53 mm

Spring data	**Installed spring**
Part No	61091-69
Free spring length ...	160 mm
Spring rate	170 N/mm
Preload adj.range ...	[6-14] mm

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HO 531_EN_1
Issued 2026-01-23

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand