

Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	HO 733	1
C-spanner S46	60710-02	1
Sticker set "ÖHLINS"	10207-01	1
Owners manual road & track	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Honda X-ADV

HO 733

Mounting Instructions

MOUNTING INSTRUCTIONS

Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

Note!


Before mounting this product clean the vehicle thoroughly.

Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.


1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

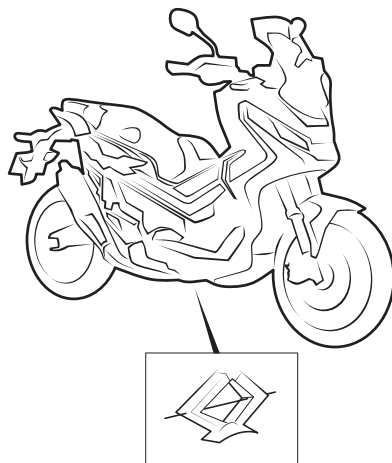

2


Lift the seat by using the ignition key. Remove the plastic covers (1) (2) by loosening the screws (3) (4) (5) (6).

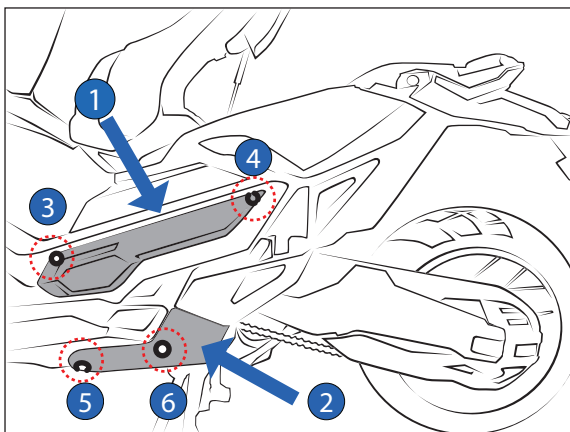

MOUNTING INSTRUCTIONS

3

Loosen the screws (1) (2) (3) (4) (5) (6) (7) in order to remove the parts (8) (9) as in diagram below.

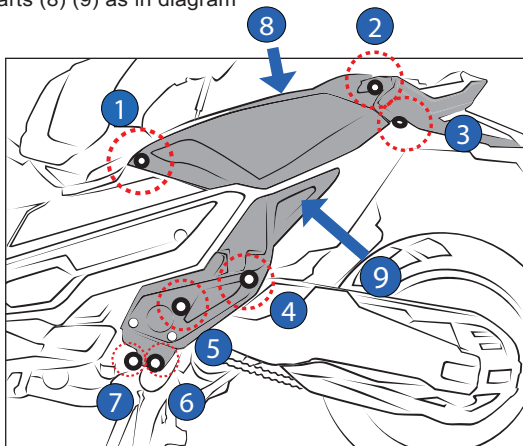

4


Remove the rear mudguard by loosening 4 screws (1) (2) (3) (4) for ease to the upper shock absorber mounting point.

5

Uninstall the shock absorber as following:

Upper bolt : Recommended use the extension tool to loosen the bolt (5).


Lower bolt : Remove the bolts (6) (7) from the linkage and shock absorber.

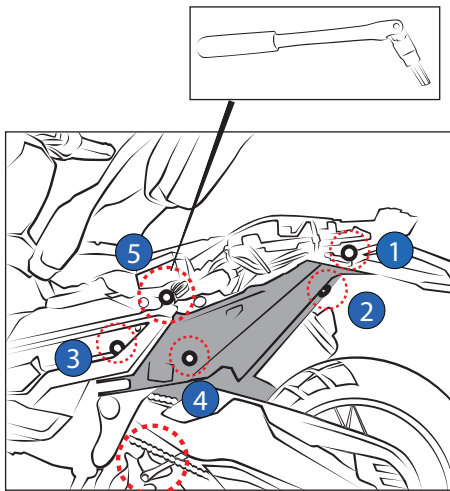

6

Install the Öhlins shock absorber and tighten at a torque value as specified in the vehicle service manual.


Reverse all procedures as necessary.

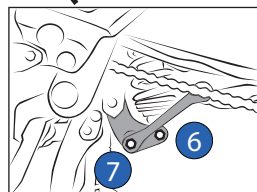

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

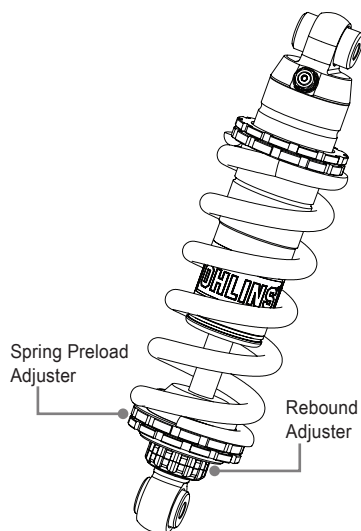

SET-UP DATA

Recommended set-up

Spring Preload..... 12 mm.
Rebound adjuster 14 Clicks

Shock absorber data

Length 306 mm.
Stroke 58 mm.

Spring

Part No 61096-69
Free spring length 190 mm.
Spring rate 170 N/mm
Preload adj.range [0-17] mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HO 733_EN_0
Issued 2017-10-18

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com