

**Note!**

*Please note that there can be small differences between your product and the images in these instructions.*

**Note!**

*Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.*

**Cancellation kit, Porsche 992 GT3**

**35020-36**

**Mounting Instructions**

# MOUNTING INSTRUCTIONS

## Only front axle:

Change the front axle installed connectors against the supplied connector.

1




Dismantle the standard connector.

2

Open the lock from the plug connector and remove the standard wires out of the connector. Use a correct tool.

3

Insert the wire completed into the supplied connector until to the lock. The pinposition/ cable colour is not relevant. Subsequently lock the connector.

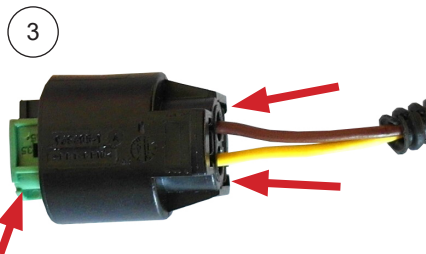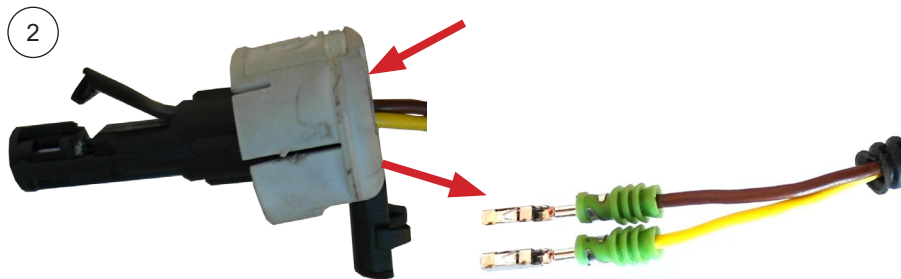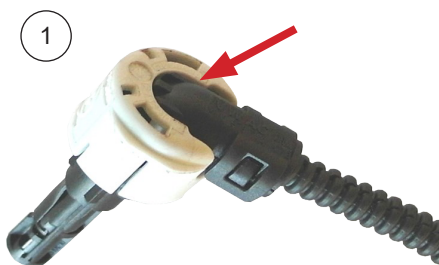

Lock the connector

# MOUNTING INSTRUCTIONS

## Right front:

The part no. of the front cancellation is 67010714.

**1**


Cut the supplied adhesive pad in the middles.

**2**

Fix the supplied adhesive pad on the cancellation kits.

### **Note!**

*Adherend must be cleaned and degreased.*

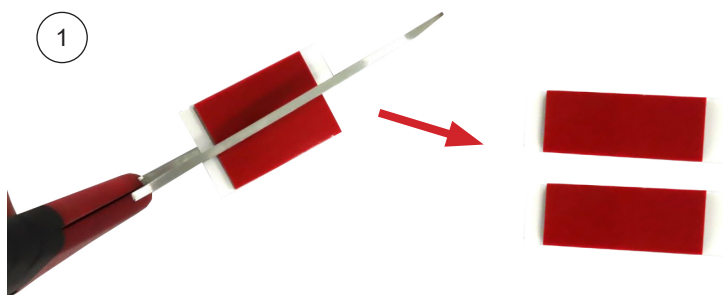

# MOUNTING INSTRUCTIONS

## Right front axle:


Attach the electronic component on the strut with the adhesive pad.

### **Note!**

*Adherend on the strut must be cleaned and degreased.*

**1**

In addition, the electronic component must be secured with two cable ties. Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the cable with cable ties on the strut.

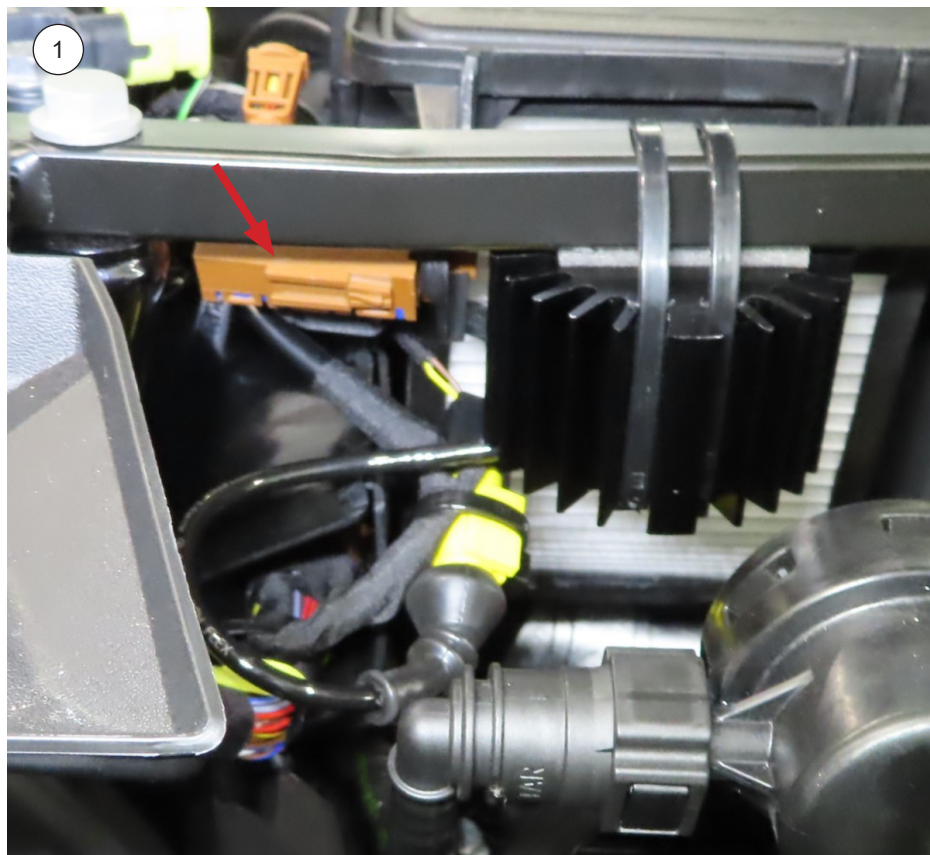

# MOUNTING INSTRUCTIONS

## Left front axle:


Attach the electronic component on the strut with the adhesive pad.

### **Note!**

*Adherend on the strut must be cleaned and degreased.*

**1**

In addition, the electronic component must be secured with two cable ties. Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the cable with cable ties on the strut.

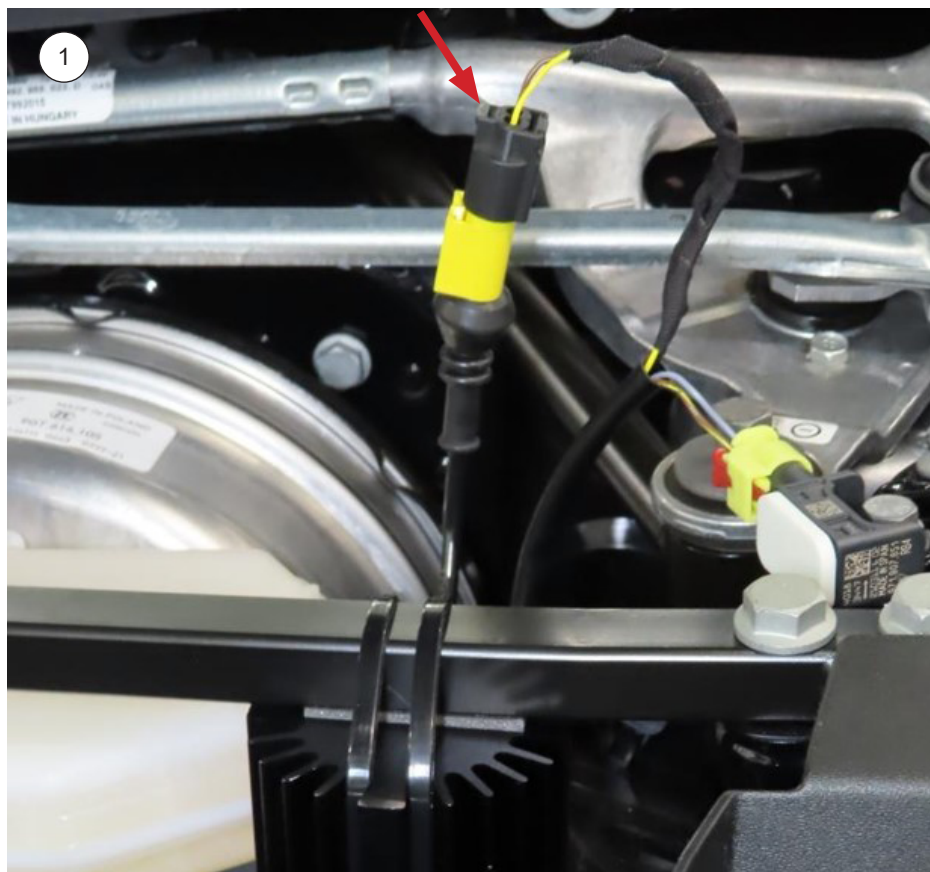

# MOUNTING INSTRUCTIONS

## Rear axle:

1

Fix the supplied adhesive pad on the cancellation kits.

### **Note!**



*Adherend on the strut must be cleaned and degreased.*

2

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the electronic component on the the center of the surface.

### **Note!**

*Surface must be cleaned and degreased.*

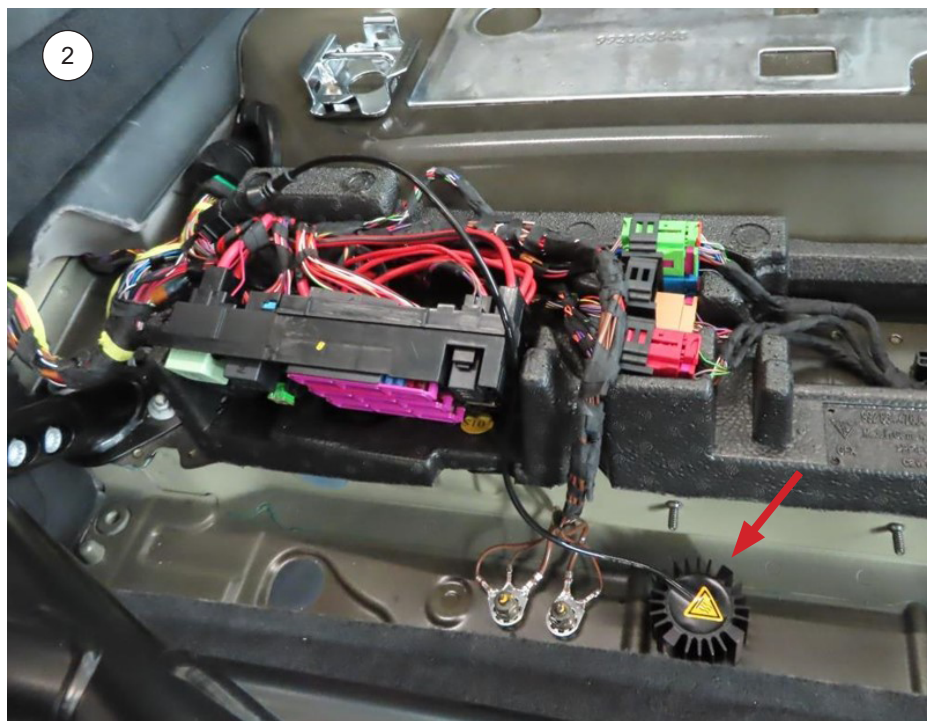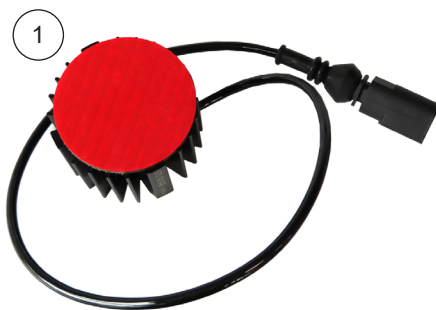



# MOUNTING INSTRUCTIONS

## Rear axle:

3



Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the electronic component on the the center of the surface.

4

Fix the wire with cabel ties on cable wire harness.

### **Note!**

*Surface must be cleaned and degreased.*

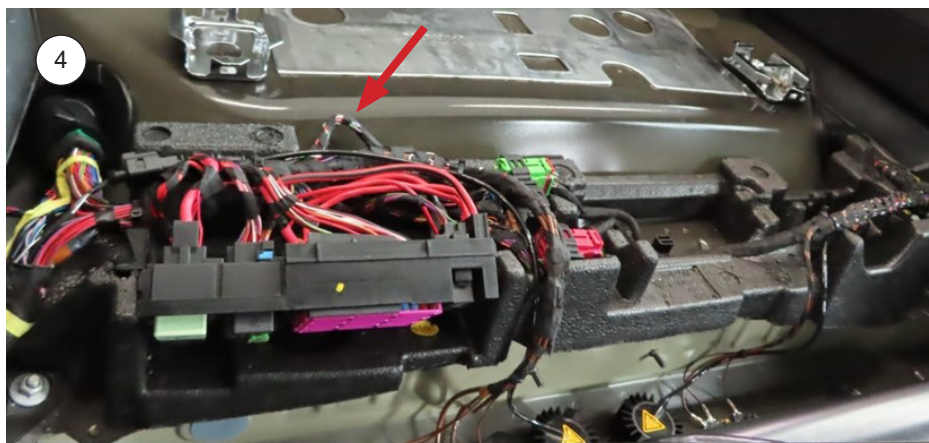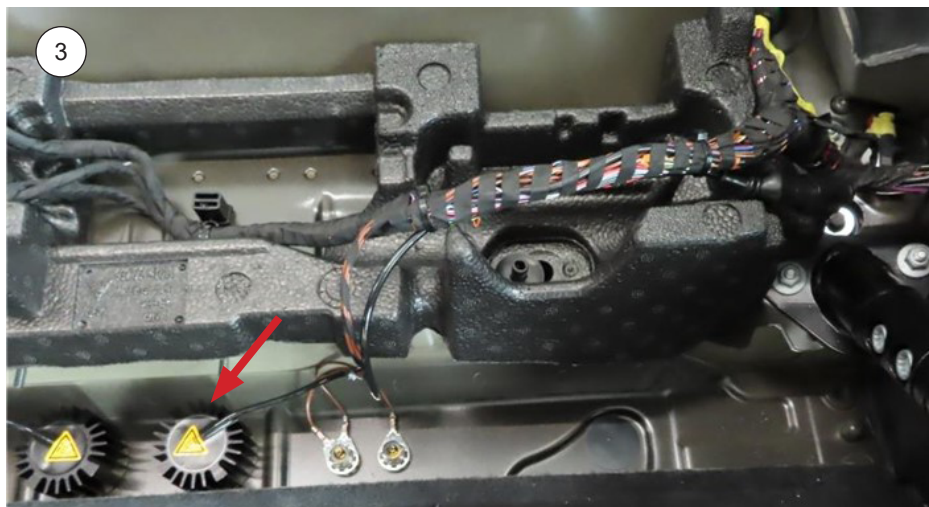

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI\_35020-36\_0  
Issued 2022-12-13

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB  
Box 722  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00  
fax +46 8 590 025 80



[www.ohlins.com](http://www.ohlins.com)